



Trapped carpet lint

BLOWER MAINTENANCE

For indoor facilities.

Due to carpet lint particularly in *new facilities*, the blower air intake screen, optional filter screen and also the blower exhaust port **MUST** be cleaned (vacuumed) daily for a period of time in order to keep lint from building up inside the blower unit.

Blower air intake/exhaust should be inspected on a regular basis for lint build-up and cleaned as deemed necessary by:

- Removing the optional filter screen by pulling on the D ring to separate the filter screen from the blower's air intake.
- Vacuum the blower's air intake screen and exhaust port (see above photo)
- Vacuum and/or wash the (**removed**) optional filter screen in warm soapy solution.
- Rinse and when **completely dry**, re-attach the filter screen to the blower by snapping the D ring clip back into the blower air intake screen
- **NEVER TURN OFF BLOWER BY PULLING ON THE POWER CORD OR BY KICKING THE SWITCH TO THE OFF POSITION WITH YOUR FOOT.**