


18' x 42' Spring Floor
Bottom Layer (Springed Panels)

Quantities:


- 24 — 5' x 5' Springed Panels
- 8 — 5' x 3' Springed Panels
- 3 — 5' x 2' Springed Panels
- 1 — 3' x 2' Springed Panels

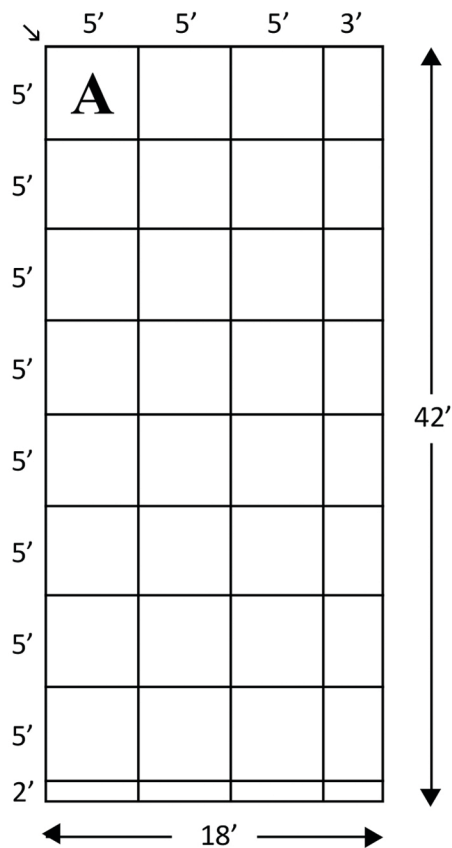


18' x 42' Spring Floor
Top Layer (Flat Panels)


Quantities:

- 21 — 5' x 5' Panels
- 3 — 5' x 4.5' Panels
- 10 — 5' x 2.5' Panels
- 7 — 5' x 0.5' Panels
- 1 — 4.5' x 2.5' Panels
- 1 — 4.5' x 0.5' Panels
- 1 — 2.5' x 2.5' Panels
- 1 — 2.5' x 0.5' Panels

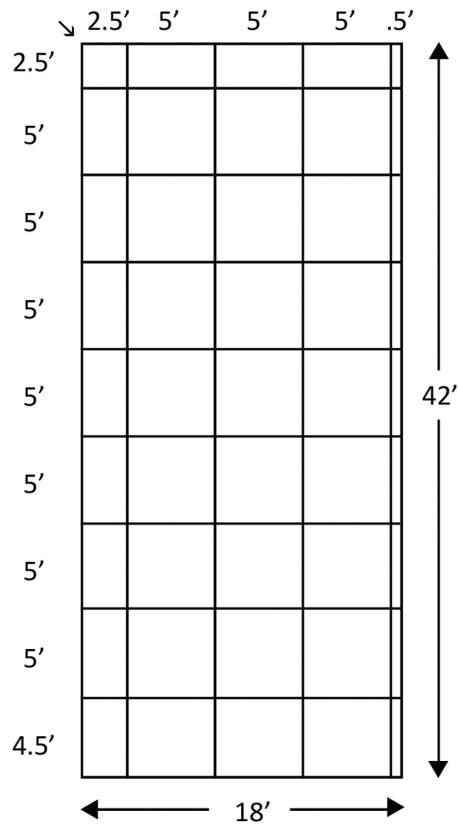


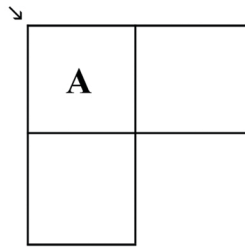

The bottom panels have blue velcro on top, springs on bottom. Start in one corner with three bottom (springed) 5' x 5' panels. (Do not start at each corner and work toward center.) Carefully align the edges to be squared up.

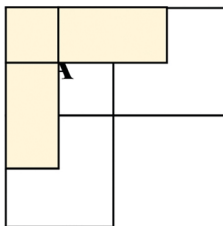


Apply the top layer as shown, starting first with the one 2½' x 2½' panel and then the two 5' x 2½' panels. This secures perfect alignment of the bottom. (To maintain alignment, be careful not to walk on the unsecured bottom panels.)

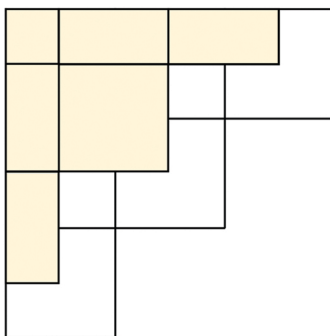

Continue to add panels (expanding out from the original corner) with great attention to abutting the panels and keeping them square. All of the edges should align.

(Adding the top layer as you work across will keep the panels from wandering.)

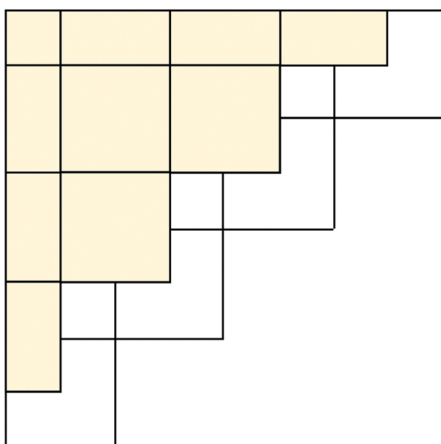

Refer to the layout when you get to the far edges. Some mild warping may occur as a result of banding for shipment. Generally the velcro will hold the boards in place, especially when it is covered with a foam product. In worst cases, you might have to temporarily place a weight on the offending panel or put a screw in the panel until the warp disappears. You are now ready to roll out your Carpet Bonded Form or Flexi-Rolls. **We thank you for your purchase.**