
Assembly Instructions

54’ x 42’ Spring Floor

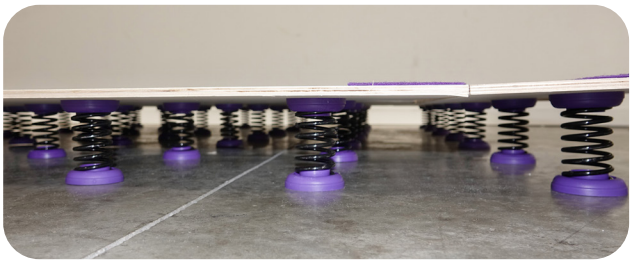



Scan QR code for Video Assembly Instructions

Assembly Time: ~ 6 hours


Assembly Requires 2-4 Adults

Thank you for purchasing the 54’ x 42’ Spring Floor.

After opening the boxes, please check the parts list to make sure all pieces have arrived in good condition. If you have any questions during this assembly process, please contact your regional Tumbl Trak Representatives.

Bottom Layer (Springed Panels)


- (80) 5’ x 5’ Springed Panels
- (10) 2’ x 5’ Springed Panels
- (8) 4’ x 5’ Springed Panels
- (1) 2’ x 4’ Springed Panel

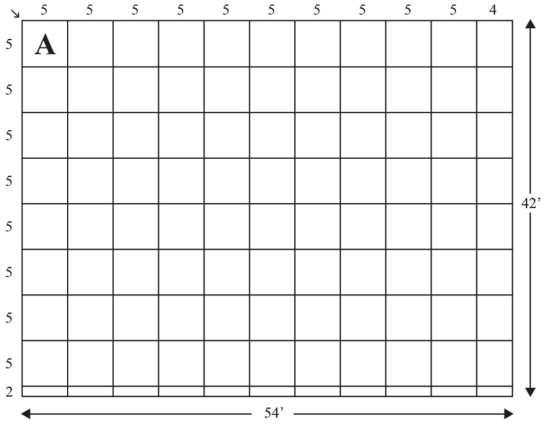

Bottom Layer

Top Layer (Flat Panels)

- (1) 2.5’ x 2.5’ Flat Panel
- (1) 2.5’ x 4.5’ Flat Panel
- (17) 2.5’ x 5’ Flat Panels
- (7) 1.5’ x 5’ Flat Panels
- (1) 1.5’ x 2.5’ Flat Panel
- (1) 1.5’ x 4.5’ Flat Panel
- (70) 5’ x 5’ Flat Panels
- (10) 4.5’ x 5’ Flat Panels

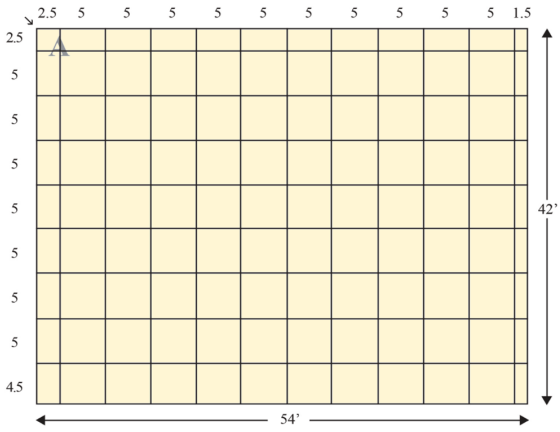

Top Layer

Tumbl Trak
Train Smart

For questions or assistance, please contact your regional Tumbl Trak representative

North & South America
+1 (800) 331-4362
tumbltrak.com
sales@tumbltrak.com

Rest of World
+44 (0)2921-167949
tumbltrak.co.uk
sales@tumbltrak.co.uk

Spring Floor User Guide

Tumbl Trak
Train Smart

Thank you for your purchase of the Tumbl Trak Spring Floor! We're excited to be part of your training space and can't wait for you to start using your new floor.

Before getting started, please take a moment to locate the included assembly kit. This kit contains all the essential hardware and tools you'll need to complete the setup process. Extra parts for your spring floor are also included.

1 Set of Gloves





1 SnapCap Board


1 Set of Kneepads



All you need to do is pop the springs in, flip the boards over and lay the carpet on top. The floor comes ready to put directly into place. We use 4-inch Velcro (not 2-inch) for optimal attachment. All boards come cut to size, velcroed and well-marked for assembly ease.


Thank you for continuing to "Train Smart" with Tumbl Trak!

If you need extra assembly instructions, they are available for download on our website:

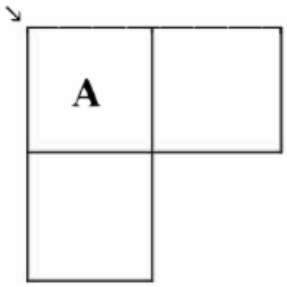


Bottom panels have purple velcro on top, springs on bottom. Start in one corner with three bottom (springed) 5x5' panels. *(Do not start at each corner and work toward center.)*

Carefully align the edges to be squared up.

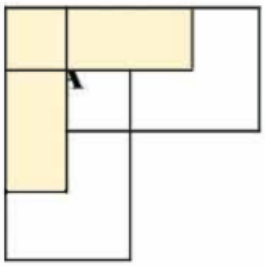


Apply the top layer as shown, starting first with the one 2.5x2.5' panel and then the two 2.5x5' panels. This secures perfect alignment of the bottom.

To maintain alignment, be careful not to walk on the unsecured bottom panels.

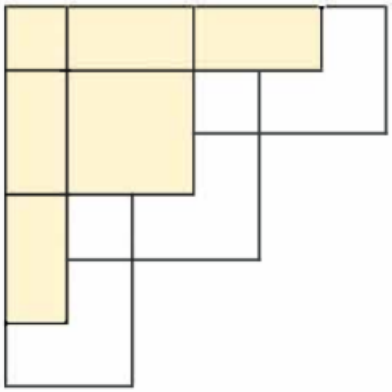

Continue to add panels (expanding out from the original corner) with great attention to abutting the panels and keeping them square. All the edges should align.

Adding the top layer as you work across will keep the panels from wandering.

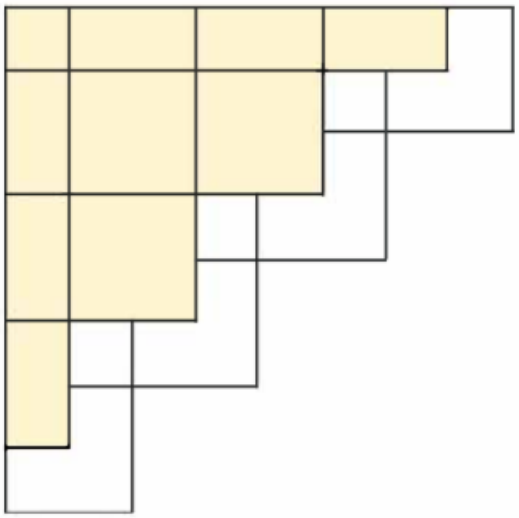

Refer to the layout when you get to the far edges. Some mild warping may possibly occur as a result of banding for shipment.

The velcro connection can alleviate mild warping. Temporarily weight or screws can also be used to level panels until the warp disappears.

You are now ready to roll out your Carpet Bonded Form or Flexi-Rolls.