

# Assembly Instructions

## Boundex Cuddle Box



Thank you for purchasing the Boundex Cuddle Box.

After opening the boxes, please check the parts list to make sure all pieces have arrived in good condition.

If you have any questions during this assembly process, please call Customer Service.

## Care Instructions:

Hand or machine wash lycra sheets in cold water on gentle cycle using mild detergent. Do not use chlorine bleach or other harsh chemicals as this could damage the fabric or cause colors to bleed. Hang to dry. Do not iron.

## Parts List

- A. (4) Foam covered support bars
- B. (4) Upright legs with D-2 knobs
- C. Yellow Lycra base layer
- D. Purple Lycra sheet\*
- E. Pink Lycra Sheet\*
- F. Blue Lycra skirt
- G. Nylon Carrying bag

\*Lycra sheets with bungee corners



### ⚠ WARNING

- Serious injury (including permanent paralysis or death) could result from any activity involving motion, rotation or height.
- All users of this equipment assume this risk of serious injury.
- Mats and pits cannot and do not eliminate hazards.

## Safety Instructions


### ALWAYS:

1. Consult an instructor prior to use.
2. Use equipment **ONLY** under the supervision of trained and qualified instructors.
3. Use equipment with trained spotters and the proper spotting equipment.
4. Check equipment before use for proper positioning; equipment can move during use.
5. Follow a progressive learning pattern. Assure basic skills are achieved before attempting more advanced skills.
6. Use equipment **ONLY** when all hard exposed surfaces are protected with proper mats.
7. Assure that all inflatable equipment has sufficient air pressure to avoid injury.

**DO NOT** use the apparatus with damaged, worn or missing parts.

**DO NOT** allow more than one person at a time to use the equipment.



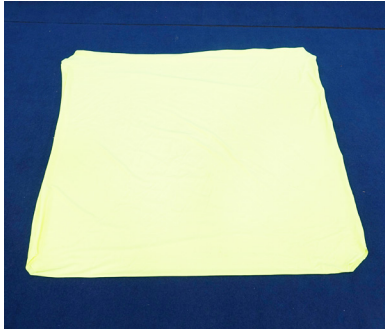

1. Lay the yellow Lycra base layer out flat, and locate the four openings at each corner.

2. Feed one foam covered support bar through each sleeve of the Lycra base layer, forming the square for the top of the Boundex. Make sure each bar is facing outward.



3. It is easiest to attach the first leg by laying it on the ground. Make sure the D-2 knobs are facing down. Attach the first leg by inserting the support bar end into the coinciding leg side.

4. To insert the other bar, lift up the leg, making sure the hole and D-2 knob are aligned to successfully lock into place. An audible click indicates the bar is secure.




5. While sliding the upright legs into the support bars, make sure to pull the knobs outward at first, until the bar slides past the knob. Release and adjust the bar until you hear an audible click, indicating that the knob is in place. Tighten the knobs securely.

6. Insert the remaining upright legs into the D-2 knobs at each corner of the Boundex.




7. The last corner will take some effort as you stretch the Lycra and assemble the last two support bars into the leg. Use small twisting actions until you hear the D-2 knobs click into place. Tighten all knobs securely.

8. Once the Boundex frame is completely assembled, lay one top layer of Lycra on top of the yellow base layer and align the cords at the four corners.

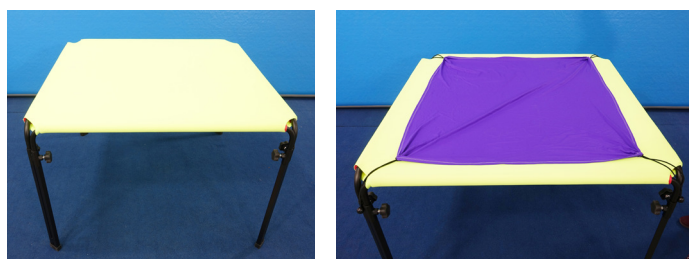

9. Pull bungee through opening of the two support bars.

10. Stretch the bungee outward to go around both D-2 knobs.

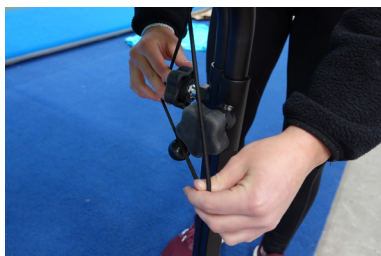

11. Repeat this process at each corner with the bungees. Place the second layer of Lycra with bungees across the first layer and repeat process with attaching bungees at each corner.

To watch the Boundex Cuddle Box in action, visit our website: [www.tumbltrak.com](http://www.tumbltrak.com)





12. To add the Lycra skirt, place the skirt over the bed and locate the four corners of the skirt to align with each end.

13. Stretch the corners of the Lycra skirt over the knobs until the legs are covered.



14. The Lycra skirt will cover each side of the Boundex. **DO NOT** stretch the skirt under the feet of the Boundex frame legs.

The Lycra's softness creates the Boundex's unique feel, but it's sensitive to punctures. Avoid sharp objects like zippers, buckles, or nails to prevent punctures.